

## ROOM THERMOSTAT

### FEATURES

- +5 to +30°C temperature range
- Heating and Cooling contacts

### INSTALLATION

The room thermostat away from any heat source and direct sunlight.

Remove the temperature dial.

Remove screw beneath the temperature dial.

Remove thermostat facia.


Fix to wall using appropriate screws in screw locators on back box.

Wire to terminal block as per wiring instructions below.



Replace thermostat facia.

Replace screw.

Replace temperature dial.

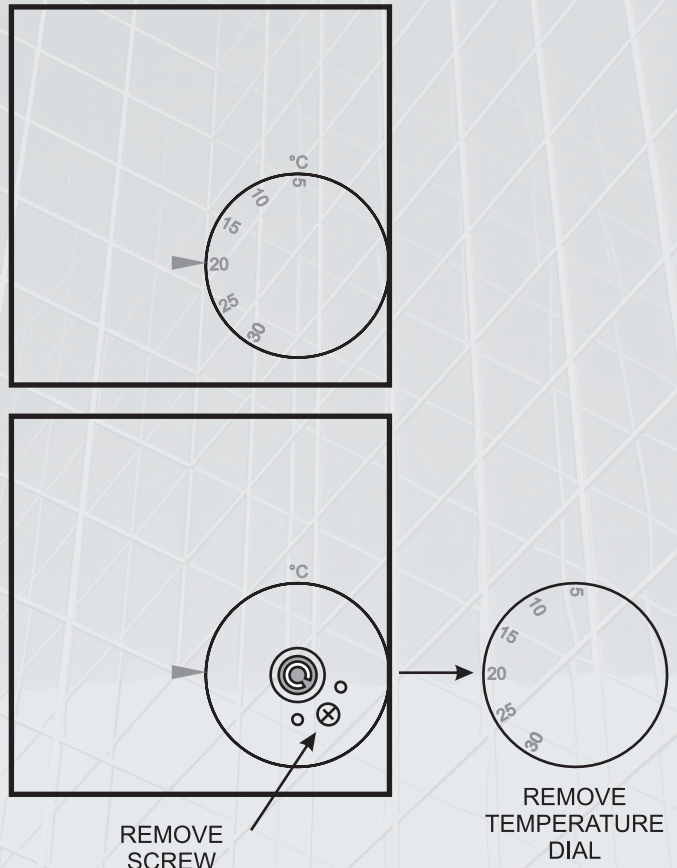

### WIRING DETAILS

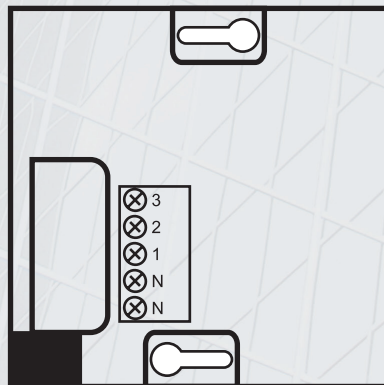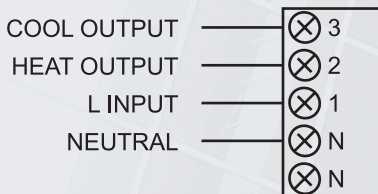

The information provided in the literature is believed to be accurate (subject to change without notice), however, use of such information shall be entirely at user's own risk.

# ENQUIRIES

+44 (0)1258 480802

Sarum Electronics Ltd

5 – 7 Holland Business Park, Holland Way  
Blandford Forum, Dorset, DT11 7TA

[www.sarumelectronics.co.uk](http://www.sarumelectronics.co.uk) | [info@sarumelectronics.co.uk](mailto:info@sarumelectronics.co.uk)