

AIR CONDITIONING DUTY SHARE PANELS			
NUMBER OF UNITS	TYPE	HIGH TEMPERATURE	CONFIGURATION
2	STANDARD	NO	1 RUN 1 STANDBY
		YES	
2	SPECIAL	NO	1 RUN 1 STANDBY
		YES	
3	STANDARD	NO	2 RUN 1 STANDBY
		YES	
3	SPECIAL	NO	2 RUN 1 STANDBY
		YES	
4	STANDARD	NO	3 RUN 1 STANDBY
		YES	
4	SPECIAL	NO	3 RUN 1 STANDBY
		YES	
4	STANDARD	NO	2 RUN 2 STANDBY
		YES	
4	SPECIAL	NO	2 RUN 2 STANDBY
		YES	

OPTIONAL EXTRAS
DESCRIPTION
GSM AUTO DIALLER WITH BATTERY BACK UP (SIM CARD REQUIRED)
EMAILLER (ETHERNET CONNECTION TO INTERNET REQUIRED)
REMOTE BEACON FOR FAULT CONDITION

STANDARD TYPE USE VOLT FREE CONTACTS FOR ON/OFF CONTROL AND RECEIVE A 12VDC SIGNAL FOR A FAULT CONDITION. SPECIAL PANELS SWITCH THE LIVE SUPPLY TO THE INDOOR UNIT FOR ON/OFF CONTROL RECEIVE 12VDC FAULT SIGNAL. ALL PANELS DUTY SHARE AND CHANGE OVER ON FAULT CONDITION, VOLT FREE COMMON FAULT CONTACTS INCLUDED AND FIRE ALARM CONTACTS WIRE WARNING LAMP.